

Installation Instructions

VLT[®] LCP Remote Mounting Kit

IP55 rated remote mounting kit for mounting of VLT[®] Control Panel of type LCP 11, LCP 12 and LCP 21.

Items supplied

- Sealing gasket
- Mounting bracket
- Mounting screws
- Cable (3 m)

Mounting

1. Fit the sealing gasket on the LCP.

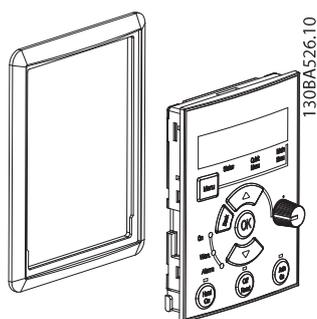


Illustration 1.1 Example: Gasket on LCP

2. Cut out section of panel and locate the LCP in the cut-out.

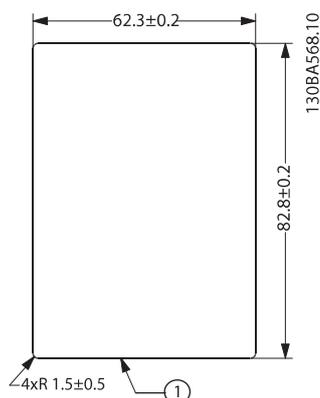


Illustration 1.2 Dimensions

1	Panel cut out Panel thickness: 1-3 mm
---	--

Table 1.1 Legend to *Illustration 1.2*

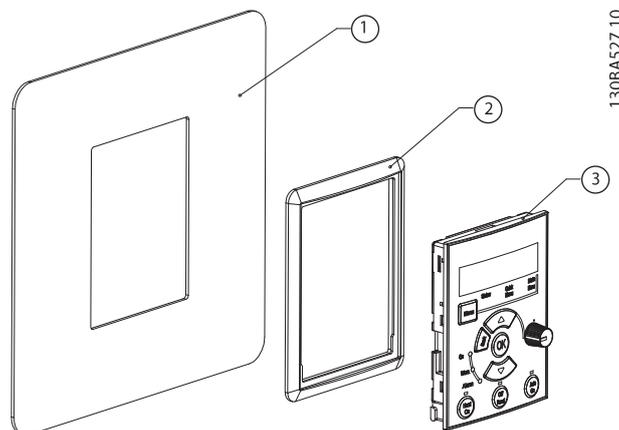


Illustration 1.3 Example: LCP on Mounting Plate

1	Mounting plate
2	Gasket
3	LCP

Table 1.2 Legend to *Illustration 1.3*

3. Slide the mounting bracket into place on the backside of the LCP and fasten it with screws.

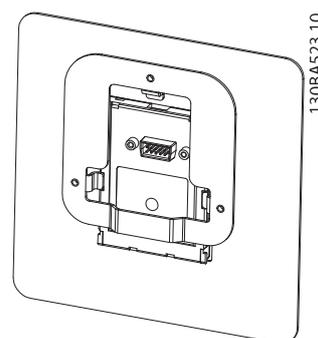


Illustration 1.4 Mounting Bracket on LCP

4. Connect the cable to LCP and fasten it with the provided thread cutting screws. Tightening torque 1.3 Nm.

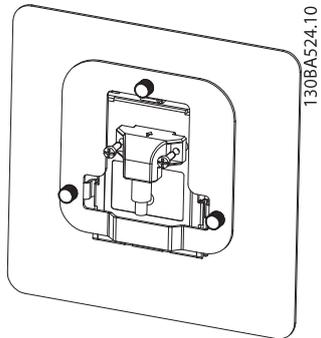


Illustration 1.5 Cable Fastening

